

IPlcStatusProvider Members

Namespace: IPS7Lnk.Advanced

Assemblies: IPS7LnkNet.Advanced.dll, IPS7LnkNet.Advanced.dll

The [IPlcStatusProvider](#) interface defines the following members.

Properties

Status

Gets the status information provided by the software driver.

C#

```
PlcStatus Status { get; }
```

Property Value

[PlcStatus](#)

The latest status information provided by the software driver.

Table of Contents

Properties	1
Status	1