

IPlcValueInfo Interface

Namespace: IPS7Lnk.Advanced

Assemblies: IPS7LnkNet.Advanced.dll

Provides information about the attributes of a value and provides access to value metadata.

C#

```
public interface IPlcValueInfo : IPlcMemberInfo, IPlcRelocatable<IPlcMemberInfo>,
    IPlcRelocatable
```

Implements [IPlcMemberInfo](#), [MakeAbsoluteMember\(Advanced\)](#), [IPlcRelocatable<Relocate>\(System\)](#), [IPlcRelocatable<Relocate>\(Int32, System\)](#), [IPlcRelocatable<Relocate>\(Int32, Int32, System\)](#), [IPlcRelocatable<Relocate>\(Advanced\)](#)

Properties

Name	Description
InitialValue	Gets the initial value of the member.
Name	Gets the name of the member. (Inherited from IPlcMemberInfo)
Type	Gets the PlcType of the member. (Inherited from IPlcMemberInfo)

Methods

Name	Description
MakeAbsoluteMember(PlcIdentity)	Retrieves the IPlcMemberInfo as an absolute addressable PLC data member. (Inherited from IPlcMemberInfo)

Table of Contents

Properties	1
Methods	1