

PlcCharInfo Class

Namespace: IPS7Lnk.Advanced

Assemblies: IPS7LnkNet.Advanced.dll

Represents a [Char](#) value member (in PLC a CHAR) its value defines a single character.

C#

```
public class PlcCharInfo : PlcValueInfo<char>, IPlcValueInfo, IPlcMemberInfo,
IPlcRelocatable<IPlcMemberInfo>, IPlcRelocatable
```

Inheritance [Object](#) > [PlcMemberInfo](#) > [PlcValueInfo<Char>](#) > [PlcCharInfo](#)

Implements [IPlcValueInfo](#), [IPlcMemberInfo](#), [IPlcRelocatable<IPlcMemberInfo>](#), [IPlcRelocatable](#)

Remarks

A PLC value of this type will be directly used by all PLC operations performed through interpreting the [Char](#) as a [Byte](#) value using the [Byte](#) A PLC developer knows a value of this type as CHAR.

Constructors

Name	Description
PlcCharInfo(PlcCharType, PlcName)	Initializes a new instance of the PlcCharInfo class using the specified type and name .
PlcCharInfo(PlcCharType, PlcName, Char)	Initializes a new instance of the PlcCharInfo class using the specified type , name and initialValue .
PlcCharInfo(PlcIdentity, PlcName)	Initializes a new instance of the PlcCharInfo class using the specified identity and name .
PlcCharInfo(PlcIdentity, PlcName, Char)	Initializes a new instance of the PlcCharInfo class using the specified identity , name and initialValue .
PlcCharInfo(PlcName)	Initializes a new instance of the PlcCharInfo class using the specified name
PlcCharInfo(PlcName, Char)	Initializes a new instance of the PlcCharInfo class using the specified name and initialValue .

Properties

Name	Description
Name	Gets the name of the member. (Inherited from PlcMemberInfo)
Type	Gets the PlcType of the member. (Inherited from PlcMemberInfo)

Methods

Name	Description
MakeAbsoluteMember(PlcIdentity)	Retrieves the PlcCharInfo as an absolute addressable PLC data member.
MakeAbsoluteMember(PlcIdentity)	When implemented in a derived class, retrieves the IPlcMemberInfo as an absolute addressable PLC data member. (Inherited from PlcMemberInfo)
Relocate(Int32)	Relocates the PlcMemberInfo using the specified offset. (Inherited from PlcMemberInfo)
Relocate(Int32, Int32)	Relocates the PlcMemberInfo using the specified offset. (Inherited from PlcMemberInfo)
Relocate(Int32, Int32, Int32)	Relocates the PlcMemberInfo using the specified offset. (Inherited from PlcMemberInfo)
Relocate(PlcAddress)	Relocates the PlcMemberInfo using the specified address. (Inherited from PlcMemberInfo)
RelocateCore(PlcType)	Relocates the member to the type specified.
RelocateCore(PlcType)	When implemented in a derived class, relocates the member to the type specified. (Inherited from PlcMemberInfo)
ToString	Retrieves the string representation of the PlcStringInfo.
ToString	Retrieves the string representation of the PlcMemberInfo. (Inherited from PlcMemberInfo)

Table of Contents

Remarks	1
Constructors	1
Properties	1
Methods	2

