

PlcDataNodeCollection Class

Namespace: IPS7Lnk.Advanced

Assemblies: IPS7LnkNet.Advanced.dll

Represents a collection of [PlcDataNode](#) objects.

C#

```
public class PlcDataNodeCollection : KeyedCollection<PlcType, PlcDataNode>,
    IList<PlcDataNode>, ICollection<PlcDataNode>, IList, ICollection,
    IReadOnlyList<PlcDataNode>, IReadOnlyCollection<PlcDataNode>, IEnumerable<PlcDataNode>,
    IEnumerable
```

Inheritance [Object](#) > [Collection<PlcDataNode>](#) > [KeyedCollection<PlcType, PlcDataNode>](#) >
PlcDataNodeCollection

Implements [IList<PlcDataNode>](#), [ICollection<PlcDataNode>](#), [IList](#), [ICollection](#),
[IReadOnlyList<PlcDataNode>](#), [IReadOnlyCollection<PlcDataNode>](#), [IEnumerable<PlcDataNode>](#),
[IEnumerable](#)

Constructors

Name	Description
PlcDataNodeCollection	Initializes a new instance of the PlcDataNodeCollection class.
PlcDataNodeCollection(PlcDataNode)	Initializes a new instance of the PlcDataNodeCollection class.
PlcDataNodeCollection(PlcDataNode, IEnumerable)	Initializes a new instance of the PlcDataNodeCollection class using the owner and items specified.

Properties

Name	Description
Owner	Gets the owner of the collection objects.

Methods

Name	Description
ClearItems	Removes all elements from the PlcDataNodeCollection .
GetKeyForItem(PlcDataNode)	Extracts the key from the specified element.
InsertItem(Int32, PlcDataNode)	Inserts an element into the PlcDataNodeCollection at the specified index .
RemoveItem(Int32)	Removes the element at the specified index of the PlcDataNodeCollection .
SetItem(Int32, PlcDataNode)	Replaces the item at the specified index with the specified item.

Table of Contents

Constructors	1
Properties	1
Methods	1