

PlcDateTimeInfo Members

Namespace: IPS7Lnk.Advanced

Assemblies: IPS7LnkNet.Advanced.dll, IPS7LnkNet.Advanced.dll

The [PlcDateTimeInfo](#) type exposes the following members.

Constructors

PlcDateTimeInfo(PlcDateTimeType, PlcName)

Initializes a new instance of the [PlcDateTimeInfo](#) class using the specified **type** and **name**.

C#

```
public PlcDateTimeInfo(PlcDateTimeType type, PlcName name)
```

Parameters

type [PlcDateTimeType](#)

The type of value member.

name [PlcName](#)

The name of the value member.

Exceptions

[ArgumentNullException](#)

The **type** or **name** is a null reference (Nothing in Visual Basic).

PlcDateTimeInfo(PlcDateTimeType, PlcName, DateTime)

Initializes a new instance of the [PlcDateTimeInfo](#) class using the specified **type**, **name** and **initialValue**.

C#

```
public PlcDateTimeInfo(PlcDateTimeType type, PlcName name, DateTime initialValue)
```

Parameters

type [PlcDateTimeType](#)

The type of value member.

name [PlcName](#)

The name of the value member.

initialValue [DateTime](#)

The initial value of the new `PlcDateTimeInfo`.

Exceptions

`ArgumentNullException`

The `type` or `name` is a null reference (Nothing in Visual Basic).

`ArgumentOutOfRangeException`

The `initialValue` is out of the bounds defined by `MinValue` and `MaxValue`.

`PlcDateTimeInfo(PlcIdentity, PlcName)`

Initializes a new instance of the `PlcDateTimeInfo` class using the specified `identity` and `name`.

C#

```
public PlcDateTimeInfo(PlcIdentity identity, PlcName name)
```

Parameters

`identity` `PlcIdentity`

The `PlcIdentity` of the type of value member.

`name` `PlcName`

The name of the value member.

Exceptions

`ArgumentException`

The `identity` does not refer to the `Byte`.

`ArgumentNullException`

The `identity` or `name` is a null reference (Nothing in Visual Basic).

`PlcDateTimeInfo(PlcIdentity, PlcName, DateTime)`

Initializes a new instance of the `PlcDateTimeInfo` class using the specified `identity`, `name` and `initialValue`.

C#

```
public PlcDateTimeInfo(PlcIdentity identity, PlcName name, DateTime initialValue)
```

Parameters

`identity` `PlcIdentity`

The `PlcIdentity` of the type of value member.

name PlcName

The name of the value member.

initialValue DateTime

The initial value of the new PlcDateTimeInfo.

Exceptions

[ArgumentException](#)

The **identity** does not refer to the [Byte](#).

[ArgumentNullException](#)

The **identity**, or **name** is a null reference (Nothing in Visual Basic).

[ArgumentOutOfRangeException](#)

The **initialValue** is out of the bounds defined by [MinValue](#) and [MaxValue](#).

PlcDateTimeInfo(PlcName)

Initializes a new instance of the [PlcDateTimeInfo](#) class using the specified **name**

C#

```
public PlcDateTimeInfo(PlcName name)
```

Parameters

name PlcName

The name of the value member.

Exceptions

[ArgumentNullException](#)

The **name** is a null reference (Nothing in Visual Basic).

PlcDateTimeInfo(PlcName, DateTime)

Initializes a new instance of the [PlcDateTimeInfo](#) class using the specified **name** and **initialValue**.

C#

```
public PlcDateTimeInfo(PlcName name, DateTime initialValue)
```

Parameters

name PlcName

The name of the value member.

`initialValue` `DateTime`

The initial value of the new `PlcDateTimeInfo`.

Exceptions

`ArgumentNullException`

The `name` is a null reference (Nothing in Visual Basic).

`ArgumentOutOfRangeException`

The `initialValue` is out of the bounds defined by `MinValue` and `MaxValue`.

Methods

MakeAbsoluteMember(PlcIdentity)

Retrieves the `PlcDateTimeInfo` as an absolute addressable PLC data member.

C#

```
public override IPlcMemberInfo MakeAbsoluteMember(PlcIdentity identity)
```

Parameters

`identity` `PlcIdentity`

The `PlcIdentity` to use to define the absolute location. This identity is used to define the basis starting from that the member is located.

Returns

`IPlcMemberInfo`

In case there `IsAbsolute` is equals true the reference to this member; otherwise a new instance of the member which refers to an absolute `PlcType`.

Exceptions

`ArgumentException`

The `identity` specified does not provide the necessary information required to address the type of data.

`ArgumentNullException`

The `identity` is a null reference (Nothing in Visual Basic).

RelocateCore(PlcType)

Relocates the member to the `type` specified.

C#

```
protected override PlcMemberInfo RelocateCore(PlcType type)
```

Parameters

`type PlcType`

The `PlcType` to that the member is to be relocated.

Returns

`PlcMemberInfo`

A new instance of the same type as this PLC member instance relocated to the `type` specified.

Table of Contents

Constructors	1
PlcDateTimeInfo(PlcDateTimeType, PlcName)	1
PlcDateTimeInfo(PlcDateTimeType, PlcName, DateTime)	1
PlcDateTimeInfo(PlcIdentity, PlcName)	2
PlcDateTimeInfo(PlcIdentity, PlcName, DateTime)	2
PlcDateTimeInfo(PlcName)	3
PlcDateTimeInfo(PlcName, DateTime)	3
Methods	4
MakeAbsoluteMember(PlcIdentity)	4
RelocateCore(PlcType)	5