

PlcDouble Members

Namespace: IPS7Lnk.Advanced

Assemblies: IPS7LnkNet.Advanced.dll, IPS7LnkNet.Advanced.dll

The [PlcDouble](#) type exposes the following members.

Constructors

PlcDouble(PlcDoubleType)

Initializes a new instance of the [PlcDouble](#) class using the specified [type](#)

C#

```
public PlcDouble(PlcDoubleType type)
```

Parameters

[type](#) [PlcDoubleType](#)

The [PlcDoubleType](#) of the new [PlcDouble](#) to which the PLC value belongs.

Exceptions

[ArgumentNullException](#)

The [type](#) is a null reference (Nothing in Visual Basic).

PlcDouble(PlcDoubleType, Double)

Initializes a new instance of the [PlcDouble](#) class using the specified [type](#) and [value](#).

C#

```
public PlcDouble(PlcDoubleType type, double value)
```

Parameters

[type](#) [PlcDoubleType](#)

The [PlcDoubleType](#) of the new [PlcDouble](#) to which the PLC value belongs.

[value](#) [Double](#)

The initial value of the new [PlcDouble](#).

Exceptions

[ArgumentNullException](#)

The `type` is a null reference (Nothing in Visual Basic).

PlcDouble(PlcDoubleType, PlcName)

Initializes a new instance of the `PlcDouble` class using the specified `type` and `name`.

C#

```
public PlcDouble(PlcDoubleType type, PlcName name)
```

Parameters

`type` `PlcDoubleType`

The `PlcDoubleType` of the new `PlcDouble` to which the PLC value belongs.

`name` `PlcName`

The name of the value.

Exceptions

`ArgumentNullException`

The `type` or `name` is a null reference (Nothing in Visual Basic).

PlcDouble(PlcDoubleType, PlcName, Double)

Initializes a new instance of the `PlcDouble` class using the specified `type`, `name` and `value`.

C#

```
public PlcDouble(PlcDoubleType type, PlcName name, double value)
```

Parameters

`type` `PlcDoubleType`

The `PlcDoubleType` of the new `PlcDouble` to which the PLC value belongs.

`name` `PlcName`

The name of the value.

`value` `Double`

The initial value of the new `PlcDouble`.

Exceptions

`ArgumentNullException`

The `type` or `name` is a null reference (Nothing in Visual Basic).

PlcDouble(PlcIdentity)

Initializes a new instance of the [PlcDouble](#) class using the specified [identity](#)

C#

```
public PlcDouble(PlcIdentity identity)
```

Parameters

[identity](#) [PlcIdentity](#)

The [PlcIdentity](#) of the new [PlcDouble](#) to which the PLC value belongs.

Exceptions

[ArgumentException](#)

The [identity](#) does not refer to the [DWord](#).

[ArgumentNullException](#)

The [identity](#) is a null reference (Nothing in Visual Basic).

PlcDouble(PlcIdentity, Double)

Initializes a new instance of the [PlcDouble](#) class using the specified [identity](#) and [value](#).

C#

```
public PlcDouble(PlcIdentity identity, double value)
```

Parameters

[identity](#) [PlcIdentity](#)

The [PlcIdentity](#) of the new [PlcDouble](#) to which the PLC value belongs.

[value](#) [Double](#)

The initial value of the new [PlcDouble](#).

Exceptions

[ArgumentException](#)

The [identity](#) does not refer to the [DWord](#).

[ArgumentNullException](#)

The [identity](#) is a null reference (Nothing in Visual Basic).

PlcDouble(PlcIdentity, PlcName)

Initializes a new instance of the [PlcDouble](#) class using the specified [identity](#) and [name](#).

C#

```
public PlcDouble(PlcIdentity identity, PlcName name)
```

Parameters

[identity](#) [PlcIdentity](#)

The [PlcIdentity](#) of the new [PlcDouble](#) to which the PLC value belongs.

[name](#) [PlcName](#)

The name of the value.

Exceptions

[ArgumentException](#)

The [identity](#) does not refer to the [DWord](#).

[ArgumentNullException](#)

The [identity](#) or [name](#) is a null reference (Nothing in Visual Basic).

PlcDouble(PlcIdentity, PlcName, Double)

Initializes a new instance of the [PlcDouble](#) class using the specified [identity](#), [name](#) and [value](#).

C#

```
public PlcDouble(PlcIdentity identity, PlcName name, double value)
```

Parameters

[identity](#) [PlcIdentity](#)

The [PlcIdentity](#) of the new [PlcDouble](#) to which the PLC value belongs.

[name](#) [PlcName](#)

The name of the value.

[value](#) [Double](#)

The initial value of the new [PlcDouble](#).

Exceptions

[ArgumentException](#)

The [identity](#) does not refer to the [DWord](#).

ArgumentNullException

The **identity** or **name** is a null reference (Nothing in Visual Basic).

Methods

GetValueCore(PlcDeviceConnection)

Retrieves the current value of the PLC value from a **IPlcDevice** using the **connection** specified.

C#

```
protected override double GetValueCore(PlcDeviceConnection connection)
```

Parameters

connection **PlcDeviceConnection**

The **PlcDeviceConnection** from that the data is to be retrieved.

Returns

Double

The current value of the PLC value.

Exceptions

InvalidOperationException

The **connection** is in **Faulted** state and cannot longer be opened.

ObjectDisposedException

The **connection** has been disposed of.

RelocateCore(PlcAddress)

Relocates the value to the **address** specified.

C#

```
protected override IPlcValue RelocateCore(PlcAddress address)
```

Parameters

address **PlcAddress**

The **PlcAddress** to that the value is to be relocated.

Returns

IPlcValue

A new instance of the same type as this PLC value instance relocated to the **address** specified.

SetValueCore(PlcDeviceConnection, Double)

Stores the **value** in the **IPlcDevice** assigned to the **connection** specified.

C#

```
protected override void SetValueCore(PlcDeviceConnection connection, double value)
```

Parameters

connection **PlcDeviceConnection**

The **PlcDeviceConnection** to use to store the **value**.

value **Double**

The value to be stored.

Exceptions

InvalidOperationException

The **connection** is in **Faulted** state and cannot longer be opened.

ObjectDisposedException

The **connection** has been disposed of.

Table of Contents

Constructors	1
PlcDouble(PlcDoubleType)	1
PlcDouble(PlcDoubleType, Double)	1
PlcDouble(PlcDoubleType, PlcName)	2
PlcDouble(PlcDoubleType, PlcName, Double)	2
PlcDouble(PlcIdentity)	3
PlcDouble(PlcIdentity, Double)	3
PlcDouble(PlcIdentity, PlcName)	4
PlcDouble(PlcIdentity, PlcName, Double)	4
Methods	5
GetValueCore(PlcDeviceConnection)	5
RelocateCore(PlcAddress)	5
SetValueCore(PlcDeviceConnection, Double)	6

