

PlcInt32Info Members

Namespace: IPS7Lnk.Advanced

Assemblies: IPS7LnkNet.Advanced.dll, IPS7LnkNet.Advanced.dll

The [PlcInt32Info](#) type exposes the following members.

Constructors

PlcInt32Info(PlcIdentity, PlcName)

Initializes a new instance of the [PlcInt32Info](#) class using the specified [identity](#) and [name](#).

C#

```
public PlcInt32Info(PlcIdentity identity, PlcName name)
```

Parameters

[identity](#) [PlcIdentity](#)

The [PlcIdentity](#) of the type of value member.

[name](#) [PlcName](#)

The name of the value member.

Exceptions

[ArgumentException](#)

The [identity](#) does not refer to the [DWord](#).

[ArgumentNullException](#)

The [identity](#) or [name](#) is a null reference (Nothing in Visual Basic).

PlcInt32Info(PlcIdentity, PlcName, Int32)

Initializes a new instance of the [PlcInt32Info](#) class using the specified [identity](#), [name](#) and [initialValue](#).

C#

```
public PlcInt32Info(PlcIdentity identity, PlcName name, int initialValue)
```

Parameters

[identity](#) [PlcIdentity](#)

The [PlcIdentity](#) of the type of value member.

[name](#) [PlcName](#)

The name of the value member.

`initialValue` `Int32`

The initial value of the new `PlcInt32Info`.

Exceptions

`ArgumentException`

The `identity` does not refer to the `DWord`.

`ArgumentNullException`

The `identity`, or `name` is a null reference (Nothing in Visual Basic).

PlcInt32Info(PlcInt32Type, PlcName)

Initializes a new instance of the `PlcInt32Info` class using the specified `type` and `name`.

C#

```
public PlcInt32Info(PlcInt32Type type, PlcName name)
```

Parameters

`type` `PlcInt32Type`

The type of value member.

`name` `PlcName`

The name of the value member.

Exceptions

`ArgumentNullException`

The `type` or `name` is a null reference (Nothing in Visual Basic).

PlcInt32Info(PlcInt32Type, PlcName, Int32)

Initializes a new instance of the `PlcInt32Info` class using the specified `type`, `name` and `initialValue`.

C#

```
public PlcInt32Info(PlcInt32Type type, PlcName name, int initialValue)
```

Parameters

`type` `PlcInt32Type`

The type of value member.

name PlcName

The name of the value member.

initialValue Int32

The initial value of the new PlcInt32Info.

Exceptions

ArgumentNullException

The **type** or **name** is a null reference (Nothing in Visual Basic).

PlcInt32Info(PlcName)

Initializes a new instance of the PlcInt32Info class using the specified **name**

C#

```
public PlcInt32Info(PlcName name)
```

Parameters

name PlcName

The name of the value member.

Exceptions

ArgumentNullException

The **name** is a null reference (Nothing in Visual Basic).

PlcInt32Info(PlcName, Int32)

Initializes a new instance of the PlcInt32Info class using the specified **name** and **initialValue**.

C#

```
public PlcInt32Info(PlcName name, int initialValue)
```

Parameters

name PlcName

The name of the value member.

initialValue Int32

The initial value of the new PlcInt32Info.

Exceptions

ArgumentNullException

The **name** is a null reference (Nothing in Visual Basic).

Methods

MakeAbsoluteMember(PlcIdentity)

Retrieves the [PlcInt32Info](#) as an absolute addressable PLC data member.

C#

```
public override IPlcMemberInfo MakeAbsoluteMember(PlcIdentity identity)
```

Parameters

identity [PlcIdentity](#)

The [PlcIdentity](#) to use to define the absolute location. This identity is used to define the basis starting from that the member is located.

Returns

[IPlcMemberInfo](#)

In case there [IsAbsolute](#) is equals true the reference to this member; otherwise a new instance of the member which refers to an absolute [PlcType](#).

Exceptions

[ArgumentException](#)

The **identity** specified does not provide the necessary information required to address the type of data.

[ArgumentNullException](#)

The **identity** is a null reference (Nothing in Visual Basic).

RelocateCore(PlcType)

Relocates the member to the **type** specified.

C#

```
protected override PlcMemberInfo RelocateCore(PlcType type)
```

Parameters

type [PlcType](#)

The [PlcType](#) to that the member is to be relocated.

Returns

[PlcMemberInfo](#)

A new instance of the same type as this PLC member instance relocated to the [type](#) specified.

Table of Contents

Constructors	1
PlcInt32Info(PlcIdentity, PlcName)	1
PlcInt32Info(PlcIdentity, PlcName, Int32)	1
PlcInt32Info(PlcInt32Type, PlcName)	2
PlcInt32Info(PlcInt32Type, PlcName, Int32)	2
PlcInt32Info(PlcName)	3
PlcInt32Info(PlcName, Int32)	3
Methods	4
MakeAbsoluteMember(PlcIdentity)	4
RelocateCore(PlcType)	4