

PlcTypeCollection Members

Namespace: IPS7Lnk.Advanced

Assemblies: IPS7LnkNet.Advanced.dll, IPS7LnkNet.Advanced.dll

The [PlcTypeCollection](#) type exposes the following members.

Constructors

PlcTypeCollection()

Initializes a new instance of the [PlcTypeCollection](#) class.

C#

```
public PlcTypeCollection()
```

Methods

GetKeyForItem(PlcType)

Extracts the key from the specified element.

C#

```
protected override PlcName GetKeyForItem(PlcType item)
```

Parameters

item [PlcType](#)

The element from which to extract the key.

Returns

[PlcName](#)

The key for the specified element.

Exceptions

[ArgumentNullException](#)

The **item** is a null reference (Nothing in Visual Basic).

Table of Contents

Constructors	1
PlcTypeCollection()	1
Methods	1
GetKeyForItem(PlcType)	1