

PlcValueCollection Members

Namespace: IPS7Lnk.Advanced

Assemblies: IPS7LnkNet.Advanced.dll, IPS7LnkNet.Advanced.dll

The [PlcValueCollection](#) type exposes the following members.

Constructors

PlcValueCollection()

Initializes a new instance of the [PlcValueCollection](#) class.

C#

```
public PlcValueCollection()
```

Methods

GetKeyForItem(IPlcValue)

Extracts the key from the specified element.

C#

```
protected override PlcName GetKeyForItem(IPlcValue item)
```

Parameters

item [IPlcValue](#)

The element from which to extract the key.

Returns

[PlcName](#)

The key for the specified element.

Exceptions

[ArgumentNullException](#)

The **item** is a null reference (Nothing in Visual Basic).

Table of Contents

Constructors	1
PlcValueCollection()	1
Methods	1
GetKeyForItem(IPlcValue)	1